

User Manual

Ultrasonic dental cleaner with smart gum recognition, 3 cleaning modes and USB-C charging.



✓ 3 cleaning modes

✓ USB-C charging

✓ Built-in LED light



Before you start

Read this manual carefully before using the device and keep it for future reference. This product is for personal hygiene and does not replace professional dental care.

01


Getting started in 5 steps



Place the desired tip.




Tighten it with the included wrench.

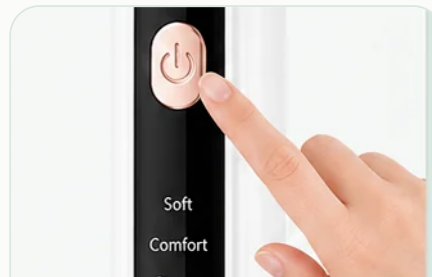

Press and hold the button for 2 seconds.



Select the cleaning mode and use it gently.

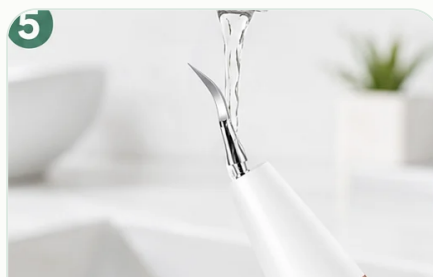

Rinse the tip with water after each use. Do not immerse the device in water.



Tip Adjust the intensity to your needs. Always start with the soft mode the first time.

02

Package contents



Ultrasonic dental cleaner
x1



Pointed tips
x2



Flat tips
x2



Dental mirror
x1



Dental probe
x1



Dental tweezers
x1



Flat dental scraper
x1



Tip wrench
x1



USB-C charging cable
x1

03 Cautions

- 1 When the working tip touches the teeth, it makes a beeping sound, which is the normal working state.
- 2 If you have periodontal disease, consult your dentist before use.
- 3 If it is on the boundary of the gingiva, slight gingival bleeding may occur even in the case of healthy gingiva.
- 4 If slight gum bleeding persists — it may be due to gum defects such as periodontal disease —, discontinue use and consult your dentist.
- 5 In the process of teeth cleaning, do not stay on the surface of the teeth for a long time with the cleaning head. To remove calculus and stains on stubborn teeth, place the cleaning head at a 45° angle.
- 6 Do not touch the gums for a long time. Long time contact with the gums may hurt them.
- 7 After the machine is started, there is no peak sound on the cleaning head. If there is a peak sound, it is an abnormal phenomenon: please reinstall or tighten the cleaning head.

04 Cleaning and maintenance

- 1 Do not put or drop the product into other liquids.
- 2 The equipment should be handled with care and stored in a dry place.
- 3 Do not mix with toxic, corrosive, flammable and explosive materials.
- 4 Do not soak in water or liquid.
- 5 Keep the machine clean before and after use.
- 6 The working tip must be tightened when using.
- 7 At the first time of use: run for 2–3 seconds, then stop for 1 second; repeat several times to bring the working tip to its best state.
- 8 Operate several times to keep the working tip in its best state.
- 9 Do not bend or grind the working tip.
- 10 Do not knock or scrape the handle.

05 Maintenance



Wipe dirt off the body with a cloth; do not rinse it with water.




Remove the cleaning head after use and rinse it with water.



Do not flush the body and the power adapter with water. Do not use diluent, benzene or solvents, kerosene or scrubbing powder, etc.

06 Product diagram

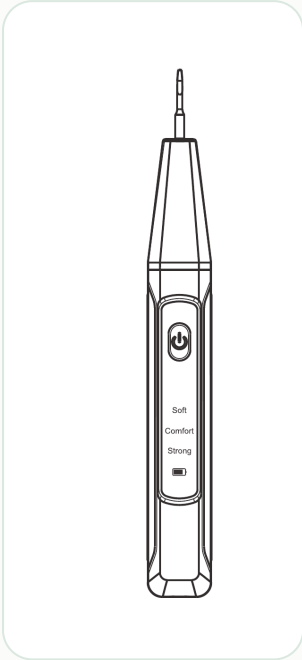

- 1 Working tip ×2
- 2 Power button
- 3 Soft mode
- 4 Comfort mode
- 5 Strong mode
- 6 Battery display
- 7 USB-C charging port
- 8 Tip wrench

07 The 3 cleaning modes

- undefined


USB-C charging port, compatible with standard cables and chargers.
- undefined

For optimal performance, use a 5 W USB charger or a computer USB port.
- undefined


Avoid fast chargers or high-power chargers.

08 How to change the cleaning head


The orientation of the working tip may be different, but as long as it is firmly mounted on it, it can be used in any direction.

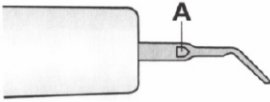


STEP 1
Confirm position A.

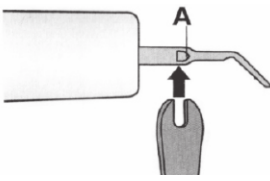

STEP 2
Insert the wrench in position A.

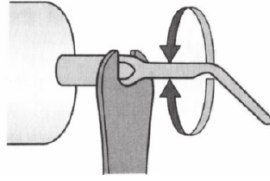

STEP 3
Rotate the head counter clockwise with the wrench to separate the working tip and complete the disassembly.

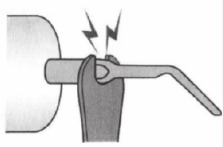

Warning!
Avoid over-tightening the assembly, as this may damage the interface.

09

Product parameters


Product name	Household tooth cleaner
Product number	HY46
Product size	24 × 27 × 189 mm
Output frequency	37 kHz + 3 kHz
Rated power	0.8 W
Output voltage	5 V
Product material	ABS
Power supply	USB charging



MADE IN CHINA

10

Charging & battery

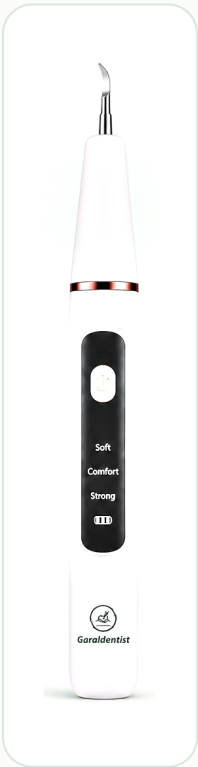

USB-C charging port, compatible with standard cables and chargers.



For optimal performance, use a 5 W USB charger or a computer USB port.



Avoid fast chargers or high-power chargers.

